




Fuses

Fuse/Relay Box

Relay Box (Located in engine compartment, right side):

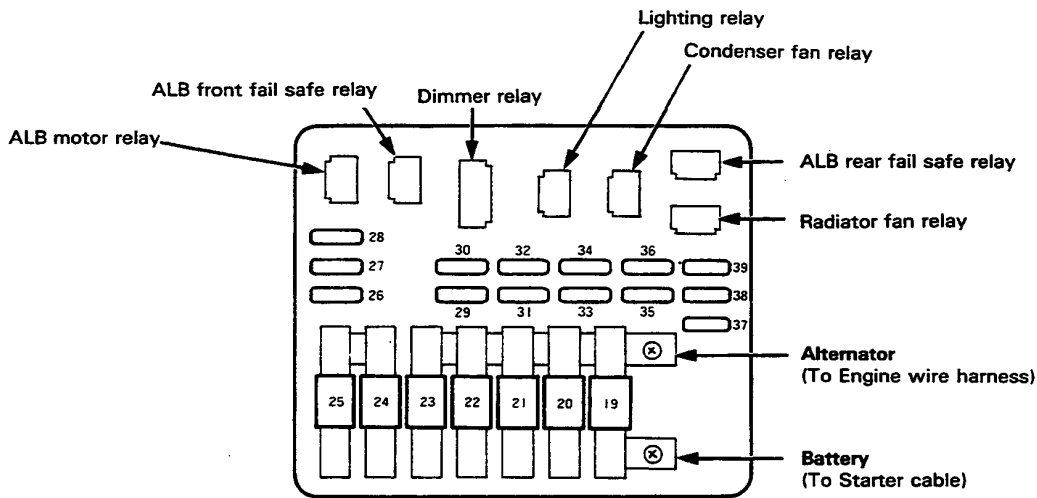

**Fuse Box (Located under dash, left side): L.H. Drive
(Located under dash, right side): R.H. Drive**

