

# Maintenance Schedule

SERVICE AT THE INTERVAL OF LISTED KM (MILES) OR MONTHS, WHICHEVER OCCURS FIRST.						
ITEMS	x 1,000 km	20	40	60	80	100
	x 1,000 miles	12	24	36	48	60
	months	12	24	36	48	60
IDLE SPEED AND IDLE CO	I	I	I	I	I	I
VALVE CLEARANCE	I	I	I	I	I	I
ALTERNATOR DRIVE BELT					I	
■ ENGINE OIL AND OIL FILTER	Replace every 10,000 km (6,000 miles) or 6 months					
■ TRANSMISSION OIL			R		R	
■ RADIATOR COOLANT					R*	
COOLING SYSTEM, HOSES AND CONNECTIONS			I		I	
E.G.R. SYSTEM (For cars using unleaded gasoline) <sup>2</sup>						I
SECONDARY AIR SUPPLY SYSTEM (For carburetor type) <sup>3</sup>						I
AIR CLEANER ELEMENT (Dry type) <sup>4</sup>	R	R	R	R	R	R
AIR CLEANER ELEMENT (Viscous type) <sup>6</sup>			R		R	
FUEL FILTER (Including aux. filter for carburetor type)			R		R	
INTAKE AIR TEMP. CONTROL SYSTEM (For carburetor type)						I
TANK, FUEL LINE AND CONNECTION			I		I	
THROTTLE CONTROL SYSTEM (For carburetor type)			I		I	
CHOKE MECHANISM (For carburetor type)			I		I	
CHOKE OPENER OPERATION (For carburetor type)						I
EVAPORATIVE EMISSION CONTROL SYSTEM <sup>5</sup>						I
IGNITION TIMING AND CONTROL SYSTEM			I		I	
SPARK PLUGS (For cars using leaded gasoline)	R	R	R	R	R	R
SPARK PLUGS (For cars using unleaded gasoline)			R		R	
DISTRIBUTOR CAP AND ROTOR			I		I	
IGNITION WIRING			I		I	
CRANKCASE EMISSION CONTROL SYSTEM			I		I	
BRAKE HOSES AND LINES (Including ALB hoses and pipes for ALB models)	I	I	I	I	I	I
BRAKE FLUID (Including ALB fluid for ALB models)			R		R	
FRONT BRAKE DISCS AND CALIPERS	I	I	I	I	I	I
FRONT BRAKE PADS	Inspect every 10,000 km (6,000 miles) or 6 months					
REAR BRAKE DISCS CALIPERS AND PADS			I		I	
PARKING BRAKES	I	I	I	I	I	I
EXHAUST PIPE AND MUFFLER	I	I	I	I	I	I
SUSPENSION MOUNTING BOLTS	I	I	I	I	I	I
FRONT WHEEL ALIGNMENT	I	I	I	I	I	I
REAR WHEEL ALIGNMENT (For 4WS model)			I		I	
STEERING OPERATION, TIE ROD ENDS, STEERING GEAR BOX BOOTS, AND CENTER SHAFT FOR 4WS MODEL	Except for 4WS model	I	I	I	I	I
	For 4WS model	I	I	I	I	I
ALB HIGH PRESSURE HOSES					R	
ALB OPERATION	I	I	I	I	I	I
POWER STEERING SYSTEM	I	I	I	I	I	I
POWER STEERING PUMP BELT			I		I	
CATALYTIC CONVERTER HEAT SHIELD (Car equipped with catalytic converter)						I

- R—Replace I—Inspect. After inspection, clean, adjust, repair or replace if necessary
- REMARK: These service intervals assume routine checking and replenishment has been done, as needed, by the customer.
- \*1 Thereafter, replace every 2 years or 40,000 km (24,000 miles), whichever comes first.
- \*2 Except for KQ type
- \*3 Except for cars using leaded gasoline
- \*4 Except for European and KQ types
- \*5 Except for fuel injection type using leaded gasoline
- \*6 For European and KQ types

**CAUTION:** The following items must be serviced more frequently on cars normally used under severe driving conditions. Refer to the chart below for the appropriate maintenance intervals.

- "Severe driving conditions" include:
- A: Repeated short distance driving
  - B: Driving in dusty conditions
  - C: Driving in severe, cold weather
  - D: Driving in areas using road salt or other corrosive materials
  - E: Driving on rough and/or muddy roads
  - F: Towing a trailer

- R—Replace  
I—Inspect. After inspection, clean, adjust, repair or replace if necessary.

Condition	Maintenance item	Maintenance operation	Interval
A, B, F	Engine oil and oil filter	R	Every 5,000 km (3,000 miles) or 3 months
F	Transmission oil	R	Every 20,000 Km (12,000 miles) or 12 months
A, B, D, E, F	Front brake discs and calipers	I	Every 10,000 km (6,000 miles) or 6 months
A, B, D, E, F	Rear brakes	I	Every 20,000 km (12,000 miles) or 12 months
B, C, E	Power steering system	I	Every 10,000 km (6,000 miles) or 6 months