


Special Tools

Special Tools

Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07HGK-0010100	Wheel Alignment Gauge Attachment	1	
②	07703-0010100	TORX® T40 BIT	1	
③	07HAJ-SF10201	Rear Steering Center Lock Pin	1	
④	07HGJ-0010000	Toe Inspection Gauge Set	1	
⑤	07941-6920003	Ball Joint Remover	1	
⑥	07GAF-SE00100	Hub Assembly Pin	1	
⑦	07GAF-SD40700	Hub Dis/assembly Base	2	
⑧	07749-0010000	Driver	1	
⑨	07746-0010500	Attachment 62 x 68 mm	1	
⑩	07965-6920201	Front Hub Dis/assembly Tool B	1	
⑪	07HAD-SF10100	Hub Bearing Driver	1	
⑫	07GAF-SE00200	Hub Assembly Driver Attachment	1	
⑬	07965-SB00000	Ball Joint Dis/assembly Tool set	1	
⑬-1	07965-SB00100	Ball Joint Remover Base	1	
⑬-2	07965-SB00200	Ball Joint Installer Base	1	
⑬-3	07965-SB00300	Ball Joint Remover/Installer	1	
⑭	07974-SA50700	Ball Joint Boot Clip Installation Guide	1	
⑮	07974-SA50800	Ball Joint Boot Clip Installation Guide	1	
⑯	07GAE-SE00101	Spring Compressor	1	or 07GAE-SE00100
⑰	07746-0010400	Attachment 52 x 55 mm	1	
⑱	07965-SD90100	Supporting Base	1	




①




②




③

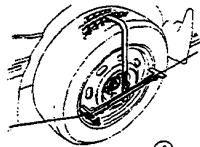

④



⑤



⑥




⑦




⑧



⑨



⑩



⑪




⑫



⑬-1



⑬-2




⑬-3



⑭



⑮



⑯



⑰



⑱



Special Tools

Ref. No.	Tool Number	Description	Q'ty	Remarks
⑰	07GAF-SE00401	Front Hub Base	1	
⑱	07HAF-SF10200	Bearing Supporting Attachment	1	
㉑	07HAF-SF10100	Ball Joint Dis/assembly Too kit	1	
㉑-1	07HAF-SF10110	Ball Joint Remover Base	1	
㉑-2	07HAF-SF10120	Ball Joint Installer Base	1	
㉑-3	07HAF-SF10130	Ball Joint Remover/Installer	1	
㉒	07GAG-SD40700	Ball Joint Boot Clip Installation Guide	1	

